



Driver Information Bulletin

Subject: Espar (Eberspaecher) Bunk Heater Operational Guideline

Bulletin #: 002-102124a

Description: This quick reference guide will serve as an Operational/Familiarization guideline for Driver's and Technicians to navigate the menu setting screen and to operate the Easy Start Pro Espar bunk heater for driver comfort.

The newest version of the ESPAR bunk heaters are equipped on new model Freightliner Cascadia tractors.

Display Screen Features:



Led Indicator Ring

- LED Ring Off: Heater is OFF
- LED RED Ring On: Heater Mode is ON
- LED RED RING Flashing: Fault Present in Heater or Controller


This Bunk Heater is designed to be used in conjunction with the truck's Auto-Start/Opti-Idle management system.


Instructions: Menu Navigation

Step 1. If the display is OFF, press ANY key to wake up the display.



Please contact your Regional Technical Consultant for additional information

Step 2. If needed rotate the dial to the desired mode setting. Select the  symbol for the Heating Mode.

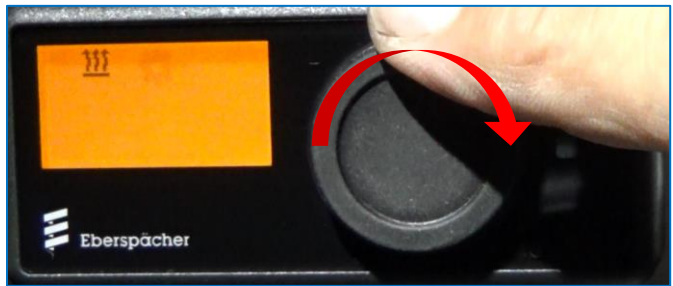

Step 3. Press the Select button to choose the Mode Setting.



Step 4. The current temperature setting will be displayed.



Step 5. Rotate the Dial to adjust the temperature setting.



Note – The temperature setting must be above the outside temperature, or the heater will not run.

Step 6. Press the Select button to choose the desired temperature setting.



Please contact your Regional Technical Consultant for additional information

The display will show that the heater is on.
Note - It may take up to 6 minutes for the heater to produce heat.



Press the Select button for more than 2 seconds to turn off the controller and the bunk heater.



For instruction to use the Idle management system. See the equipment flow code on how to operate the truck's idle system.



Scan the QR code

Please contact your Regional Technical Consultant for additional information