

REFRESHING/RESTARTING APPS



Guide for troubleshooting Galaxy Tab Active 2, 3, 5's


1

Press the **Recents Key** (physical button on the display, at the bottom right-hand corner).




2

All open apps will appear.

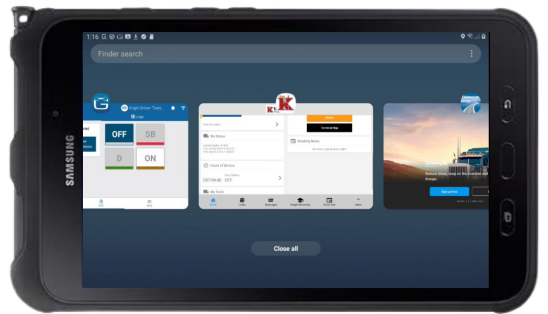

3

On the app you would like to refresh/restart, **Swipe up**.

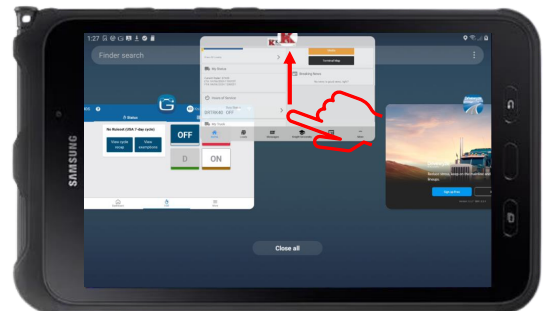

4

Success! Re-open the app to reveal it has been refreshed. (If app still appears frozen or not updating, next attempt reset, or re-install app).



Document contains sensitive information - For internal use only

SCAN FLOWCODE

FOR MORE INFORMATION ON YOUR IN-CAB TECH

