

Dekhte reh jaoge



  
**Simpolo**<sup>®</sup>  
ceramics

LAYING INSTALLATION FOR FLOOR

## LAYING INSTALLATION FOR FLOOR

- Check the laying substrate has no cracks, it is homogeneous and mature, totally clean and flat.
- Maximum deviation from flatness of 1mm per 2 meters length measured.



- First apply the adhesive onto the back of the slab with a 3mm-tile trowel (1).
- The recommended adhesive is **kerakoll & Mapei**. it must be spread over in one direction only (2)



- At the same time, spread the adhesive onto the floor substrate (3) using a 15mm U-notch or a 10mm V-notch trowel and following the same direction as previously applied to the back of the slab (4)



- Using the appropriate sucker frame, position the slab on the adhesive bed (5,6), being careful to maintain a minimum joint of 3mm.




- 
- Complete the laying operations using a suitable sealant, while keeping at least a 3mm joint using spacers (8).
  - To make this task easier, use the special device for pulling over the slabs, available on the market (9).






- Levelling wedges at each linear meter of the slabs are recommended (10-11).




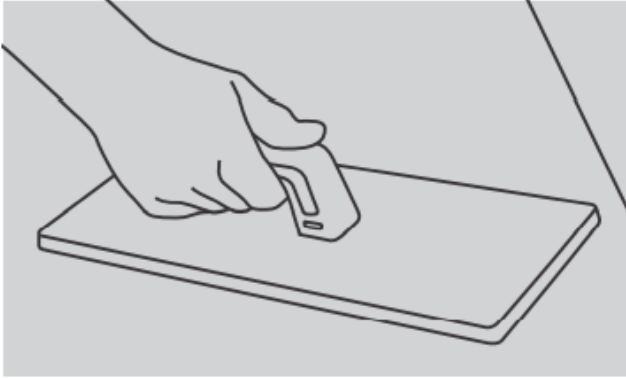

- After laying the tile, make sure it is firmly bound to the underlying surface to prevent gaps and air bubbles forming. For this purpose you must use a tile beater with a rubber bottom.

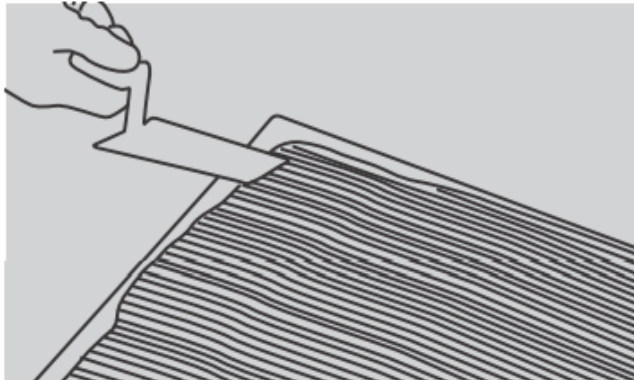

- Apply adhesive with the double-layer technique i.e. by spreading a full bed adhesive on the surface, using a 6mm square notched trowel. Then apply the adhesive also to the rear of the slab using a 3mm square notched trowel. Remember to add extra adhesive on the corners of the tile.

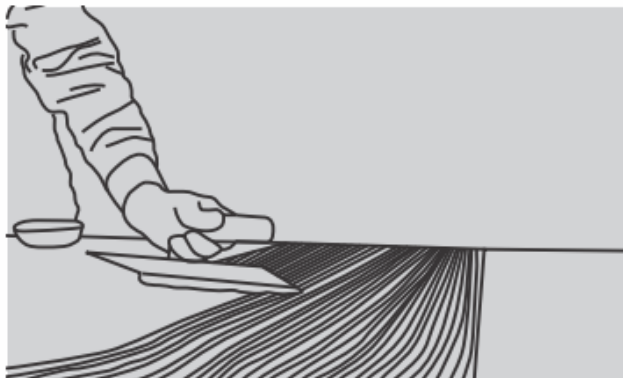

- This method refers only to adhesives that bear the indication "single-layer" by the manufacturer. Spread adhesive on the complete surface of the support. Follow the instructions of the manufacturer of the adhesive as regards type of spatula and spreading methods.

# THANK YOU



Simpolo Vitrified Private Limited  
Old Ghuntu Road, MORBI - 363 642. Gujarat, INDIA  
Tele.: +91 2822 241622, E-mail:  
[customercare@simpolo.net](mailto:customercare@simpolo.net)  
[www.simpolo.net](http://www.simpolo.net)  
Toll Free No. 1800-233-2223  
Mob: +91 72289 22222



MADE IN INDIA  
SINCE 1977